

COOLING

1) From inside the sleeper, **Push** the toggle switch located on the touch screen to the ON position.

2) **Press** the number below **“Set”** icon



(RESULT: The screen changes and displays the keypad)

3) Using the keypad, enter desired temperature.

4) **Press** Enter key.

5) **Press** Cool.

ClimaCab will operate to maintain the desired temperature.

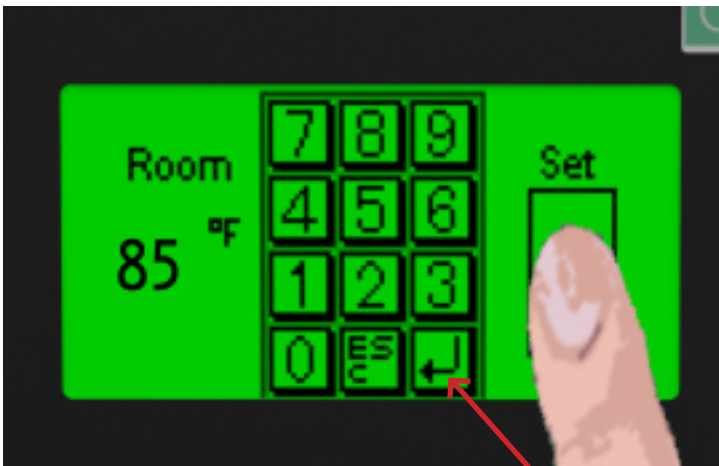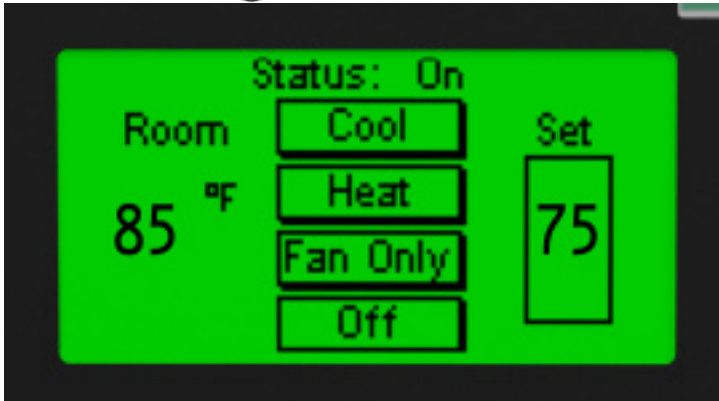

HEATING



1) From the main menu, **double-tap** the **“Heat”** button.

(RESULT: The screen changes and displays the Sliders)

2) **ADJUST** slider bar for installed heat option to desired heat level.

NOTE: Sliders for non installed options must be set to zero or faults may occur.

Set temperature feature does not work in Heating Modes.

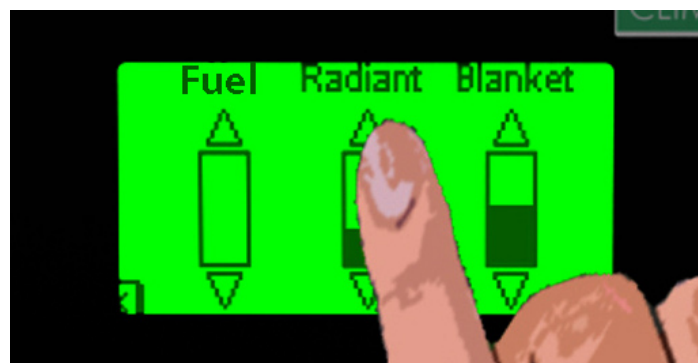
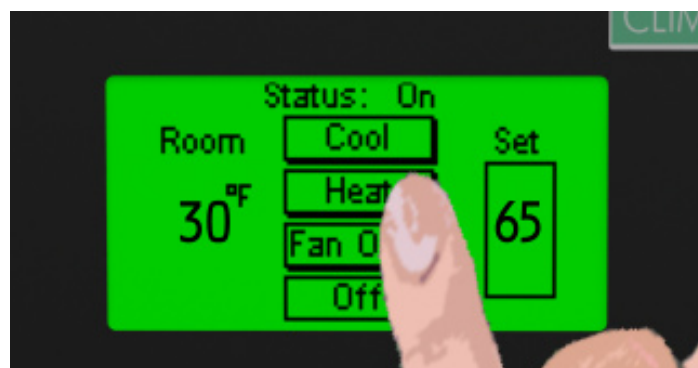


For optimal performance, we recommend pre-cooling the cab before using the CC 800.

For troubleshooting issues, please contact Glacier Bay at (510) 437-9100



ClimaCab® Operating Instructions Touch Screen Version 35 and Newer

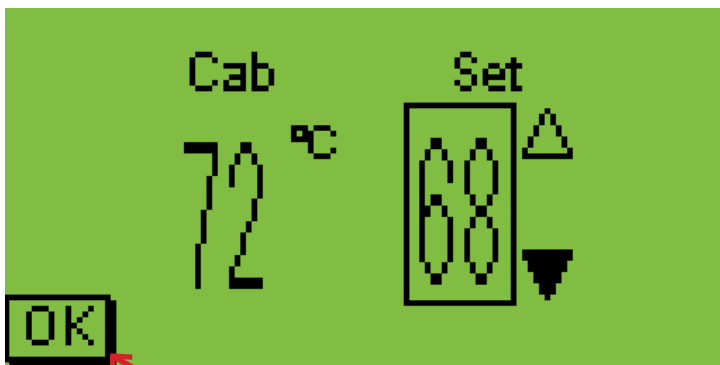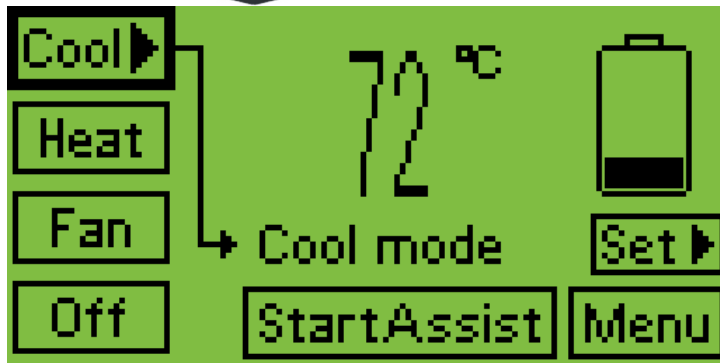

"OK" Key

COOLING

1) From inside the sleeper, **Push** the toggle switch located on the touch screen to the ON position.

2) **Press** the "Cool" button

3) Press the "Set" button

(RESULT: The screen changes and displays the keypad)

4) **Press** the **Up** and **Down** to set your desired temperature.

5) **Press "OK"**.

(You can also set the temp. by touching the numbers in the "Set" box. A number pad will appear on the screen)

ClimaCab will operate to maintain the desired temperature.

HEATING



1) From the main menu, **press** the "Heat" button.

2) **Press** the "Set" button.

3) **Adjust** the sliders for installed heat options to desired heat level.

4) **Press "OK"**

NOTE: You will only be able to adjust the heat option installed in your vehicle.

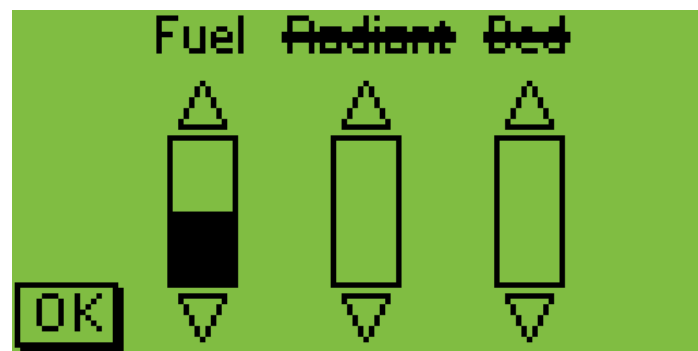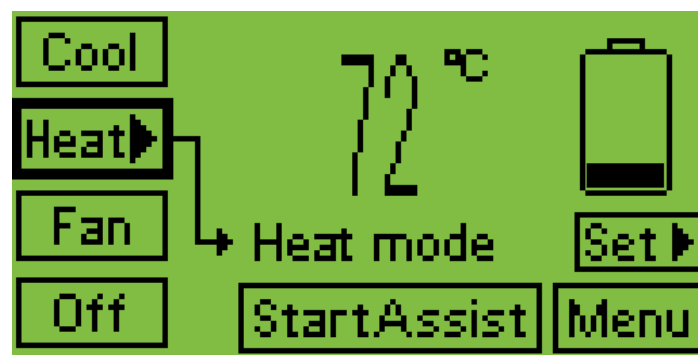

For optimal performance, we recommend pre-cooling the cab before using the CC 800.

For troubleshooting issues, please contact Glacier Bay at (510) 437-9100