





## ClimaCab USB Drive Installation

Before starting, double check to make sure that your kit contains a USB drive harness, USB drive, USB data stick, and a piece of double sided tape.


Step 1: Remove the grille, vents, and front cover from the evaporator.

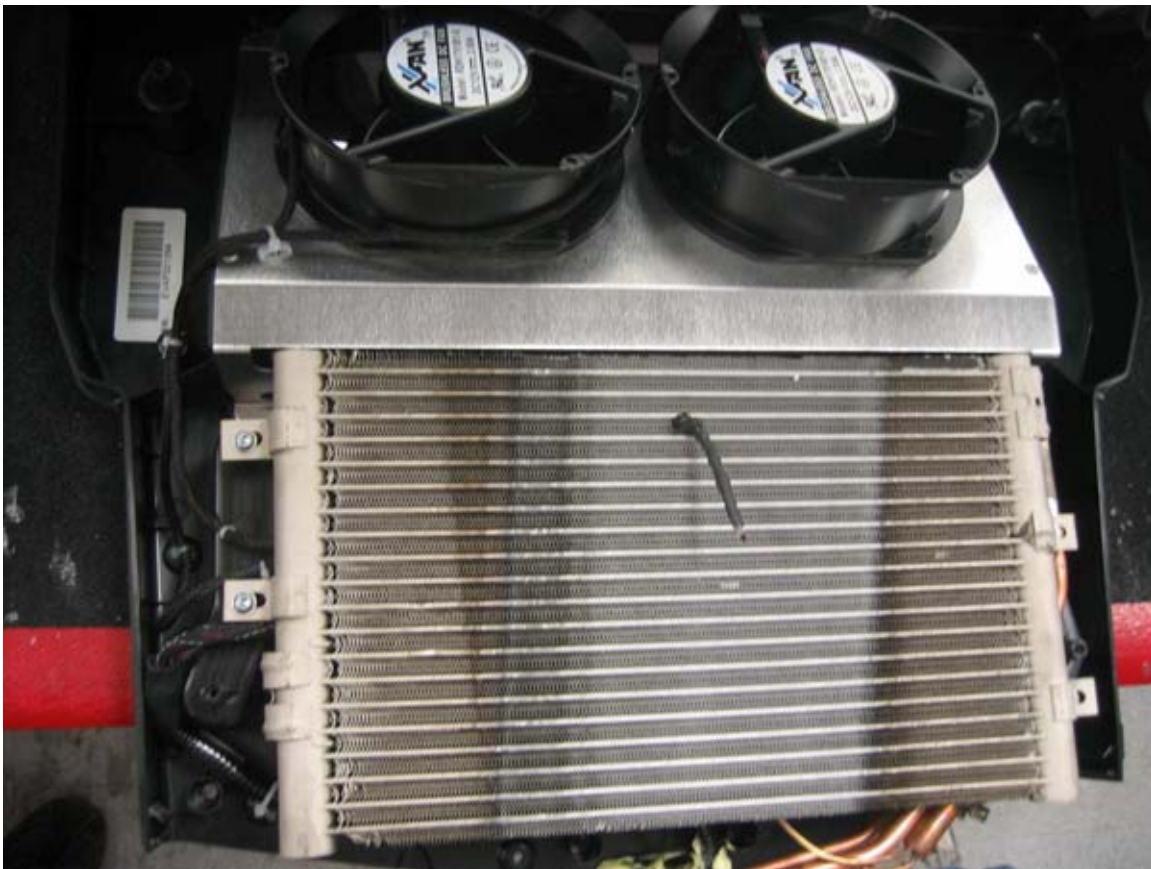

Step 2: Check to see if USB drive cable is already installed. The open end will be found near the upper left hand side of the evaporator, as shown. If the cable is already installed, proceed to step 7.

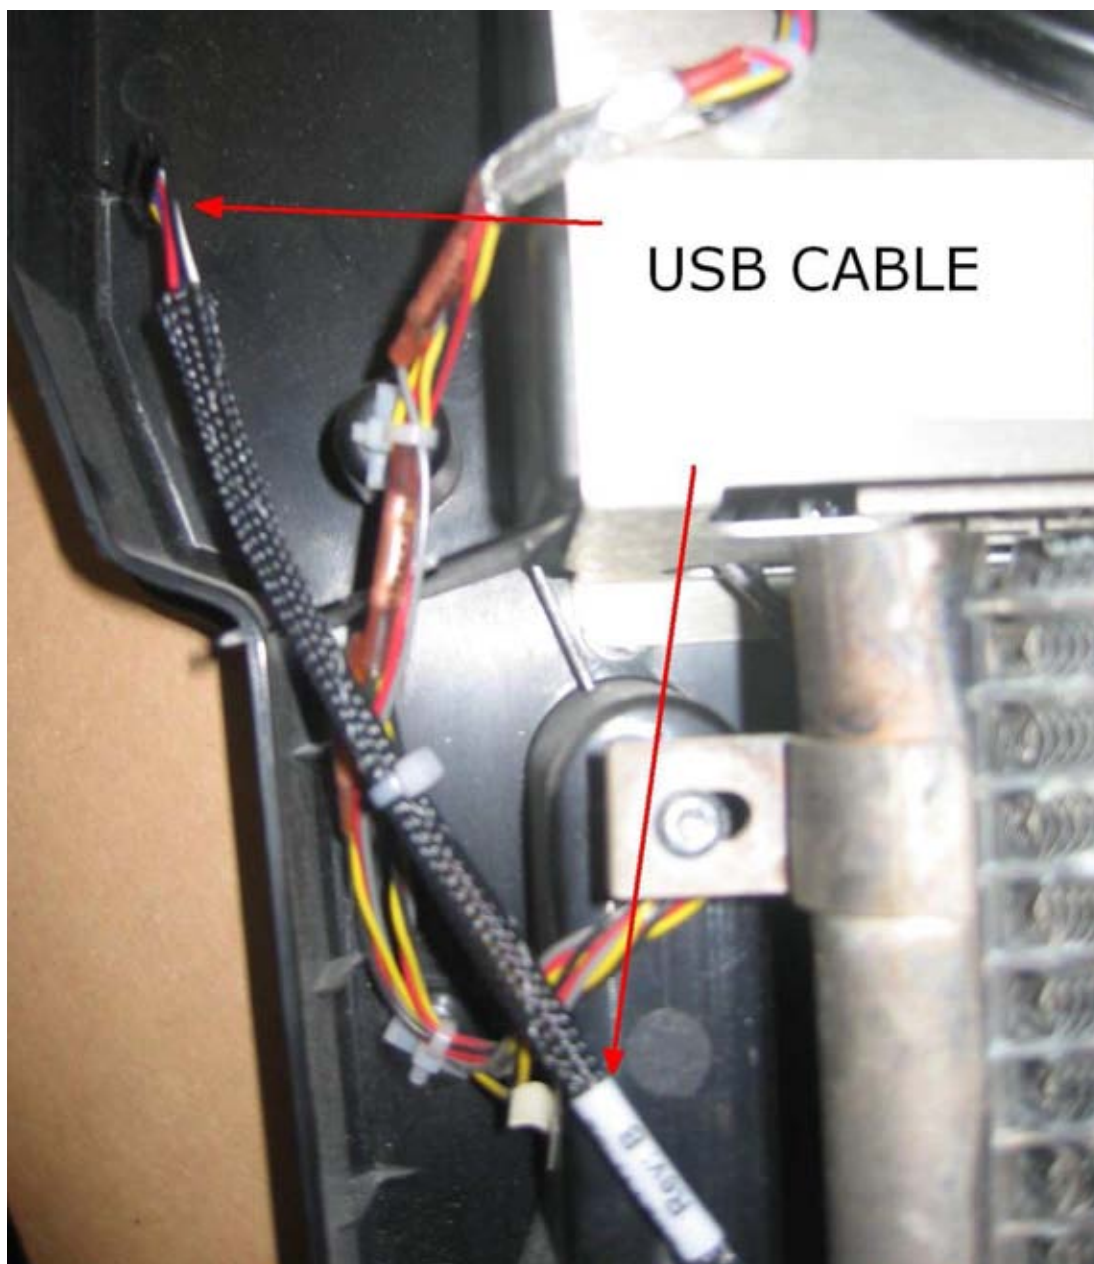


Step 3: If the USB drive cable is not installed, the circuit board will need to be accessed to plug the cable in. Remove the four screws that hold down the evaporator coil.

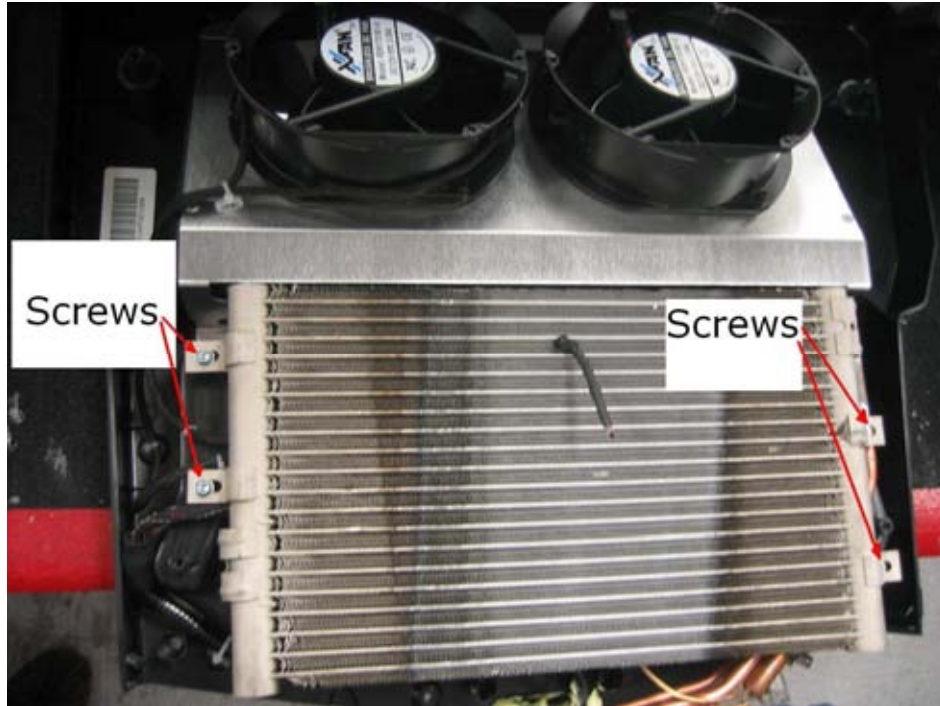

Step 4: Gently pull the evaporator coil up to access the circuit board.



Step 5: Insert the USB drive cable connector into the upper 6 pin open receptacle, as shown below. It will only go in one direction, so be sure to align the pins and snap clip properly.

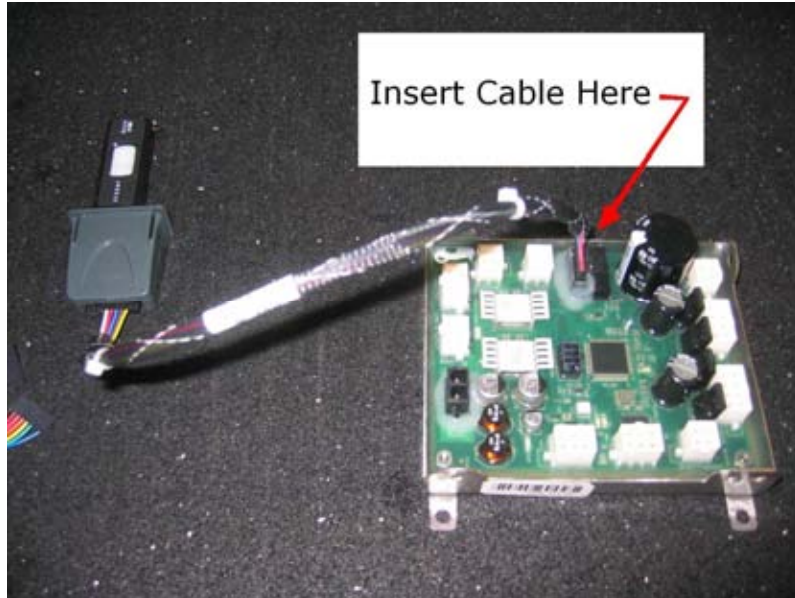

Step 6: Position the open end of the cable near the upper left hand side of the evaporator, as shown in step 2. Then, re-attach evaporator coil.

Step 7: Connect the open end of the cable to the USB drive, as shown. Be very careful to connect the wire correctly to the pins, as shown below.



Step 8: Insert USB data stick into USB drive.



Step 9: Locate the double sided tape. Apply to USB drive as shown.



Step 10: Position USB drive as shown. Be sure to leave room so that the data stick can be pulled out of the drive without hitting any part of the evaporator enclosure. Once positioned, press down firmly to get the tape to stick.



Step 10: Re-install the grille, vents, and front cover to the evaporator. With the system fully connected, be sure that the red light on the USB drive blinks periodically, indicating that it is logging data,